

B5000

Battery Energy Storage System

User Manual v1.0

Please read this manual before use and follow its guidance.

Keep this manual for future reference.





Thank You!

Thank you for making BLUETTI a part of your family.

From the very beginning, BLUETTI has tried to stay true to a sustainable future through green energy storage solutions for both indoor and outdoor use while delivering an exceptional eco-friendly experience for our homes and our world. That's why BLUETTI makes its presence in 100+ countries and is trusted by millions of customers across the globe.

Copyright © Shenzhen PowerOak Newener Co., Ltd. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without the prior written consent of Shenzhen PowerOak Newener Co., Ltd.

Notice

BLUETTI's products, services, and features are subject to the agreed-upon terms and conditions during purchase. Please note that some products, services, or features described in this manual may not be available under your purchase contract. Unless otherwise specified in the contract, BLUETTI makes no representations or warranties of any kind, express or implied, with respect to the contents of this manual.

The contents of this manual are subject to change without notice. Please get the latest version from: <https://www.bluettipower.eu/pages/manuals>

If you have any questions or concerns about this manual, please contact BLUETTI support for further assistance.

Shenzhen PowerOak Newener Co., Ltd.

F19, BLD No.1, Kaidaer, Tongsha RD No.168, Xili street, Nanshan, Shenzhen, China

Web: <https://www.bluettipower.com>

About the Manual

Overview

This user manual describes the installation, electrical connection, commissioning, maintenance and troubleshooting of B5000 Battery Energy Storage System (BESS).
Please read and understand all instructions in this manual before use.

Target Audience

Installation, operation and maintenance technicians

Symbol Conventions

This manual uses the following symbols to highlight important information:

	Danger It indicates a hazardous situation which, if not avoided, will result in death or serious injury.
	Warning It indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	Caution It indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
	Attention It indicates a potentially hazardous situation which, if not avoided, could cause substantial damage to property and the environment.
	Instruction It is used to address information not related to personal injury, equipment damage, and environmental deterioration.

Contents

About the Manual	i
1. Safety Guideline	06
1.1 Safety Instructions	06
1.2 Installation Requirements	11
1.3 Transportation Requirements	12
1.4 Label Description	12
1.5 Storage Requirements	12
2. B5000 Battery Energy Storage System	13
2.1 Introduction	13
2.2 System Configuration	13
2.3 Overview	15
2.4 Electrical Connection	19
3. System Installation	21
3.1 HV800 Packing List	22
3.2 B700 Packing List	23
3.3 B5000 BESS Packing List	24
3.4 Prepare the Necessary Tools	31
3.5 Installation Requirements	33
3.6 Installation	38
4. System Operation	46
4.1 Power on/off	46
4.2 Status of Indicators	46
4.3 System Maintenance	47
5. Disposal	48
6. Specifications	49
6.1 B700 Battery	49
6.2 HV800 Battery Controller	50
6.3 B5000 BESS	51
6.4 B5000 BESS Configuration	51

1. Safety Guideline

1.1 Safety Instructions

	Warning • Do not insert foreign objects into any ports of the equipment. • Keep the equipment out of reach of children. • Use a dry powder fire extinguisher if the equipment catches fire. • Use genuine cables and accessories provided by BLUETTI. BLUETTI is not liable for any damage caused by using third-party equipment.
	Instruction The safety guidelines provided herein serve as reference and may not encompass all necessary precautions. Always consider the actual on-site conditions when using this equipment.

1.1.1 General Requirements

Read all instructions before use.

- The installation, commissioning, and maintenance should only be performed by qualified professionals or trained personnel. Improper use, installation, or operation may cause series injury or property damage.
- Do not place the equipment near heat sources or in high temperatures.
- Do not store the equipment with flammable liquids, gases, or explosive materials.
- Maintain a well-ventilated and spacious operating area.
- Do not block or cover the vents of the equipment to avoid irrepressible damage.
- Do not stack anything on top of the B700 battery during storage or use, except for the HV800 battery controller.
- Do not move the equipment during operation as the vibrations and shocks associated with movement may cause damage to the internal hardware.
- In case of malfunction, turn off the equipment immediately and contact BLUETTI support or your local BLUETTI dealers if this manual cannot adequately explain the malfunction to you.
- Do not place the equipment on an unstable or inclined surface.
- Keep out of reach of children and pets.

1.1.2 Battery Safety

- Use the battery within the temperature range specified in this manual.
- Do not expose the battery to high temperatures or around heat sources, such as sunlight, fire, transformers, and heaters. If the battery overheats, it may cause a fire.
- Do not expose the battery to humidity or corrosive environments, as this may cause the battery to rust, corrode, and leak chemicals.
- Do not disassemble, modify, or damage the battery to prevent leakage, overheating, or fire. For example, do not insert foreign objects into the battery or place the battery in water or other liquids.
- Handle the battery with care. Do not turn it upside down or tilt it to protect it from shocks.
- Pay attention to the status indicators on the battery and related products.
- Prevent short circuits on the battery terminals to avoid fire.
- Improper use or misuse of damaged batteries or components can damage your device or injure yourself as a result of battery fluid leakage, fire, overheating, or explosion.
- Store damaged batteries away from flammable materials and undamaged ones. Only professionals should handle damaged batteries.
- Avoid welding or grinding near batteries to prevent fire from sparks or arcs.
- Lithium-ion batteries pose a high fire risk. Be aware of the following safety risks:
 - a. Thermal runaway can release flammable and harmful gases such as CO and HF. Vapors from burning batteries may irritate the eyes, skin, and throat.
 - b. Flammable gas concentration from thermal runaway batteries can cause deflagration and explosion.
 - c. Battery electrolyte is flammable, toxic, and volatile.
- If a battery leaks or emits odors, don't approach it — contact professionals for safe disposal. Use protective gear like goggles, rubber gloves, gas masks, and protective clothing.
- Do not touch a battery if any parts have been submerged in water to avoid electric shocks.
- Do not use batteries soaked in water. Dispose of them through proper recycling channels.
- Electrolyte is corrosive and can cause irritation and chemical burns. If you come into direct contact with battery electrolyte, follow these instructions:
 - a. Inhalation of Vapors: Evacuate the contaminated area, get fresh air immediately, and seek medical attention immediately.
 - b. Eye Contact: Immediately flush eyes with water for at least 15 minutes, do not rub eyes, and seek medical attention immediately.
 - c. Skin Contact: Immediately wash the infected area with soap and water and seek medical attention immediately.
 - d. Ingestion: Seek medical attention immediately.

In addition to the general battery safety precautions, the following handling instructions must be strictly followed, especially by qualified installers:

- **Handling by Installers Only**

The battery system must be handled, transported, and installed only by trained and qualified installers. End-users should not attempt to lift, move, or install the battery modules.

- **Avoid External Forces**

Do not subject the battery units to any external impact, including but not limited to:

- a. Dropping the battery during transportation or installation
- b. Dragging the battery units on the ground or rough surfaces
- c. Striking the battery with tools or equipment

- **Do Not Place Heavy Loads on the Battery**

The battery modules are not designed to bear external weight. Do not place any objects, especially heavy equipment, on top of the battery units.

- **Safe Transportation and Lifting**

Always use appropriate lifting equipment, such as trolleys or lifting straps, when handling the battery units. Ensure that the weight and dimensions of the battery are considered before moving.

- **Installer Responsibility Disclaimer**

Any damage caused by mishandling, including dropping, dragging, or placing heavy objects on the battery modules, will void the warranty and may lead to serious safety risks.

1.1.3 Maintenance Requirements

- To ensure your safety while maintaining the B5000 battery, please follow the steps and requirements below:

Step 1: Disconnect the power grid.

Step 2: Disconnect the battery and solar systems.

Step 3: Wait at least 30 minutes until the equipment is fully discharged.

- Follow anti-static requirements to prevent electric shock and other potential hazards.
- Place temporary warning signs or erect fences to prevent unauthorized access to the maintenance site.
- For any maintenance needs, please contact your local authorized service center.
- Before use, ensure a reliable grounding connection for personal safety and proper equipment function.
- Wear appropriate personal protective equipment (PPE) during operation.
- Stop operation immediately and take protective measures if there is a risk of personal injury or equipment damage.
- Use tools correctly to avoid personal injury or equipment damage.
- Do not touch energized components.

- Do not use water to clean electrical parts inside or outside the cabinet.
- Do not stand, lean on, or sit on top of the equipment.
- Do not damage the equipment modules.
- When the battery fails, avoid touching it and beware of high temperatures.
- Do not disassemble or damage the battery.
- The released electrolyte is harmful to skin and eyes.
- Avoid contact with electrolyte.
- Batteries can cause electric shock and high short-circuit current.
- Incorrect installation may also result in serious hazards.
- Please follow the guidelines below:
 - a. Remove all metal objects (e.g., watches, rings) from your body before operation.
 - b. Use tools with insulated handles.
 - c. Wear rubber gloves and boots.
 - d. Prevent metal objects or conductive liquids from contacting the battery terminals or enclosures.
 - e. Do not place tools or metal parts on top of the battery.
 - f. Always power off the HV800 battery controller and switch off the circuit breaker before connecting or disconnecting B700 battery terminals.

1.1.4 Battery Installation Requirements

- Inspect the packaging for damage before installing the B5000 battery energy storage system. Do not use B700 batteries with compromised packaging. Make sure the circuit breaker switch of the HV800 battery controller is in the OFF position.
- Tighten the screws correctly and securely with the wrench and conduct regular checks.
- Ensure there is no short circuit between the positive and negative terminals of the B5000 system. Prevent the positive and negative terminals of the system from touching other metal objects to avoid heat generation or electrolyte leakage.
- After installing the equipment, remove unused packing materials such as foam, carton, plastic, and excess cables from the equipment area.

Fire Emergency Measures

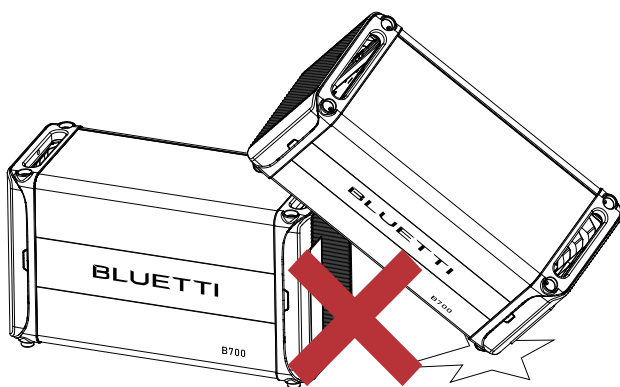
Danger	
	• In case of fire, power off the system if it is safe to do so. • Use carbon dioxide, FM-200, or ABC dry powder fire extinguisher. • Remind firefighters to avoid contact with components carrying dangerous voltage to prevent the risk of electric shock. • Overheating may cause the battery to deform and leak corrosive electrolytes or toxic gas. Keep away from batteries to avoid skin irritation and chemical burns.

Battery Drop Emergency Measures



Danger

- If the battery pack is dropped, violently impacted or tilted during installation, internal damage may occur. So do not use such battery packs to avoid safety risks such as battery leakage and electric shock.
- If the dropped battery is not obviously deformed or damaged, and there is no abnormal smell, smoke or fire, please contact a professional to transfer the battery to an open and safe place, and contact BLUETTI support.
- If the battery is obviously damaged or there is an abnormal smell, smoke or fire, please evacuate immediately, and contact a professional or BLUETTI support. Professionals can use fire extinguishing facilities to extinguish the fire under safety protection.



1.1.5 Statement

BLUETTI shall not be liable for equipment abnormality, component damage, personal injury, property loss, or other damage caused by the following reasons:

- Failure to promptly charge the battery after installation and system connection, leading to overdischarge and subsequent damage.
- Frequent overdischarge of the battery due to poor maintenance, improper capacity expansion (e.g., mixing old and new batteries), or prolonged periods of incomplete charging.
- Inadequate maintenance as instructed in the user manual, including irregular charging and checking of battery terminals.
- Failure to charge the battery as required in the user manual during storage, resulting in capacity loss or irreparable damage.
- Improper operation or incorrect connections causing battery short circuits, damage, drops, or leaks.

- Using the battery in ways not specified in the user manual, such as using batteries from other brands or those with different rated capacities, whether by users or third parties.
- The battery's actual operating temperature being too high or too low, or the external power supply parameters not meeting requirements, results in battery damage.

1.2 Installation Requirements

	Attention Avoid working with live electrical components.
--	---

- Use a tester to check for the presence of dangerous voltage before touching any conductor or metal terminals to prevent the risk of electric shock.
- After installing the equipment, remove unused packing materials such as foam, carton, plastic, and excess cables from the equipment area.
- Keep people other than the installers away from the battery energy storage system.
- Handle the equipment and accessories carefully during transport; use original or protective packaging.
- Seal wiring ports securely with fireproof and waterproof materials.
- Do not alter, damage, or cover equipment labels or nameplates.
- When installing, use appropriate tools to tighten the screws.
- Secure the equipment firmly to the floor or other stable objects, such as walls or mounting brackets before operation.
- Do not clean the equipment or any electrical components with water.
- Do not make any changes to the equipment's structure, installation sequence, or any other aspects without permission.

1.2.1 Personal Requirements

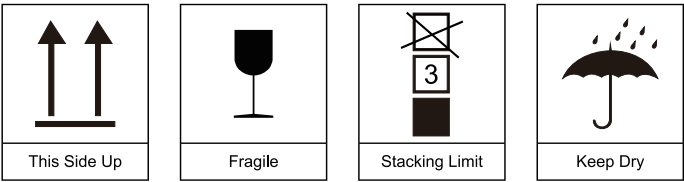
Only qualified and authorized personnel should perform installation, commissioning, and maintenance, adhering to proper safety precautions and operating practices.

- Personnel responsible for installation and maintenance must have undergone professional training. They should be well-versed in the safety guidelines and proper operating procedures.
- These individuals should have received the necessary technical training. They must be capable of recognizing potential risks during operation and promptly taking measures to minimize personal hazards.
- Only authorized professionals are allowed to replace equipment or components, including firmware update.

1.3 Transportation Requirements

All components of the B5000 battery energy storage system leave the factory in optimum electrical and mechanical state. It's necessary to use original or appropriate packaging to ensure the product safety during transportation. When you receive the product, inspect for any kind of damage and note the damage on the delivery receipt. The shipping company will be responsible for any damage or loss of the product during transportation. If necessary, please contact us for further assistance.

1.4 Label Description



Tampering with or damaging the following information is strictly prohibited:

- Symbols on the box containing important information for safe operation.
- The nameplate on the side of the box containing important parameter information related to the product.

1.5 Storage Requirements

Charge the system to 40%-60% SoC before storage.

- In order to keep the battery healthy, fully charge and discharge the system every 6 months.
- Store the system in a well-ventilated and spacious area.
- Do not store the system in flammable or explosive materials or gases.
- Clean the surface monthly with a dry, soft cloth.
- Keep the system out of reach of children and pets.
- Avoid exposing the equipment to rain, humidity, or direct sunlight.
- For details of storage temperature, please refer to [Chapter 6. Specifications](#).

2. B5000 Battery Energy Storage System

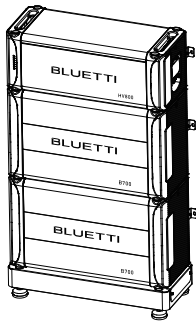
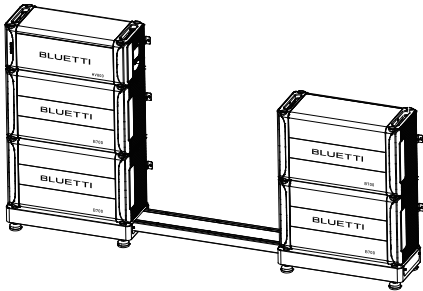
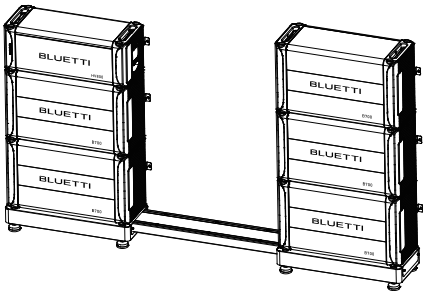
2.1 Introduction


The B5000 battery energy storage system (BESS) is designed for homes and small businesses. It includes an HV800 battery controller and 2-7 B700 battery packs connected in series, each with a capacity of 7,37 kWh.

As the control module, the HV800 monitors real-time voltage, current, and temperature for each B700 battery pack during charging and discharging. It also provides protection against overvoltage, undervoltage, overcurrent, overtemperature, and undertemperature, ensuring exceptional safety and stability.

2.2 System Configuration

Choose from the following setups, which range from 2 to 7 B700 battery packs:

	
B5000-2S	B5000-3S
	
B5000-4S	B5000-5S

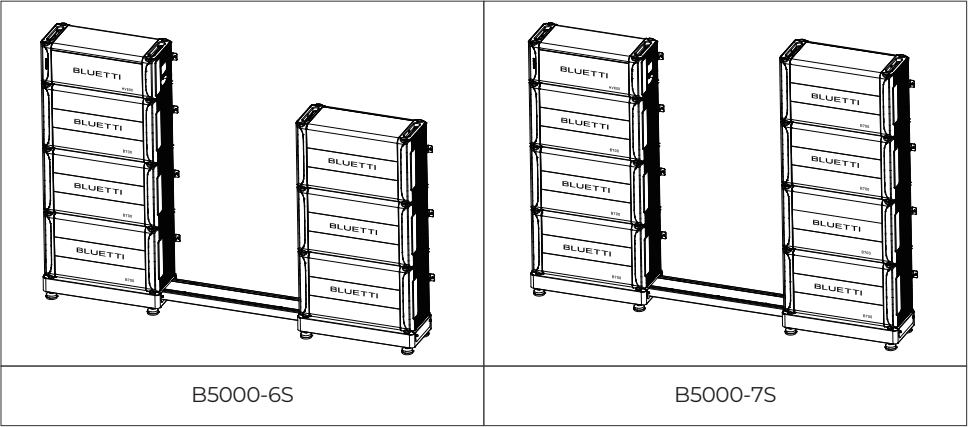


Each setup corresponds to the number of B700 battery packs employed, providing scalability and efficiency for residential and small business applications.


2.3 Overview

2.3.1 HV800 Battery Controller


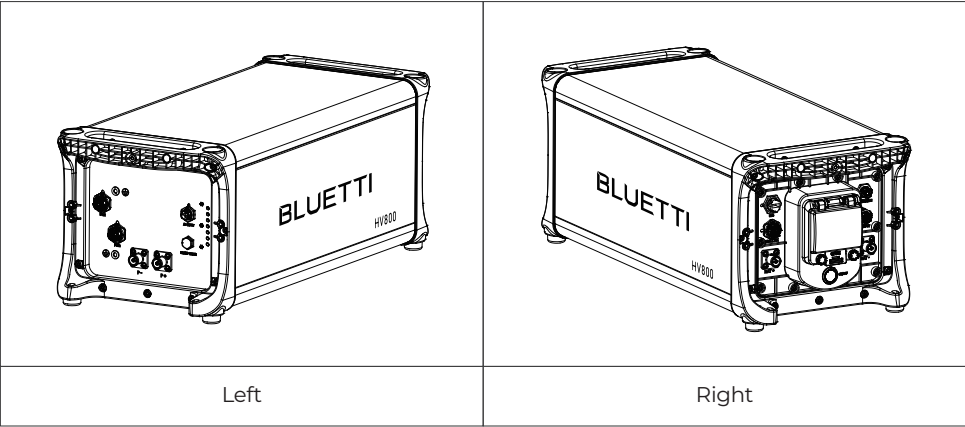
Appearance




Dimensions

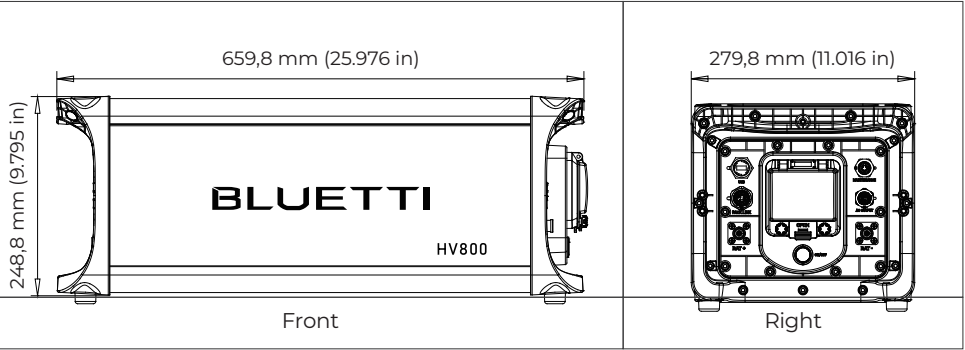

Interfaces

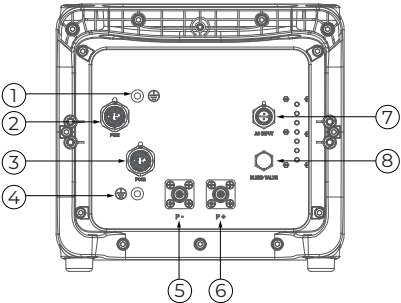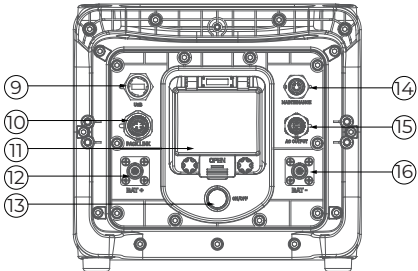					
Left			Right		
No.	Name	Decisive Voltage Classification	No.	Name	Decisive Voltage Classification
1	Grounding Terminal 1	Not applicable	9	Reserved Port	DVC-B
2	EP2000 COM Port	DVC-A	10	Battery Signal Port	DVC-B
3	Third-party Inverter COM Port	DVC-A	11	Circuit Breaker	Not applicable
4	Grounding Terminal 2	Not applicable	12	BAT+ Terminal	DVC-C
5	Negative Terminal (To PCS)	DVC-C	13	Power Button	Not applicable
6	Positive Terminal (To PCS)	DVC-C	14	Reserved Port	DVC-B
7	AC Input (To PCS)	DVC-C	15	AC Output (To Battery)	DVC-C
8	Bleed Valve	Not applicable	16	BAT- Terminal	DVC-C

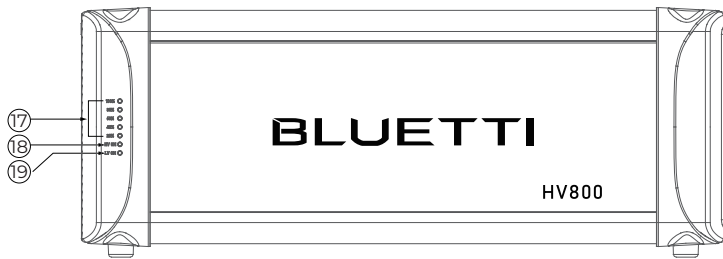


Front


No.	Name
17	SoC Indicators
18	High Voltage Power-on Indicator
19	Low Voltage Power-on Indicator

2.3.2 B700 Battery

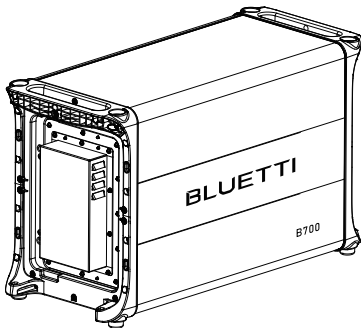Appearance




Left

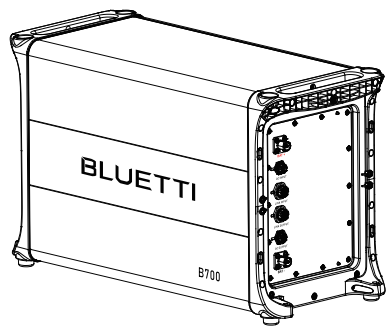


Right

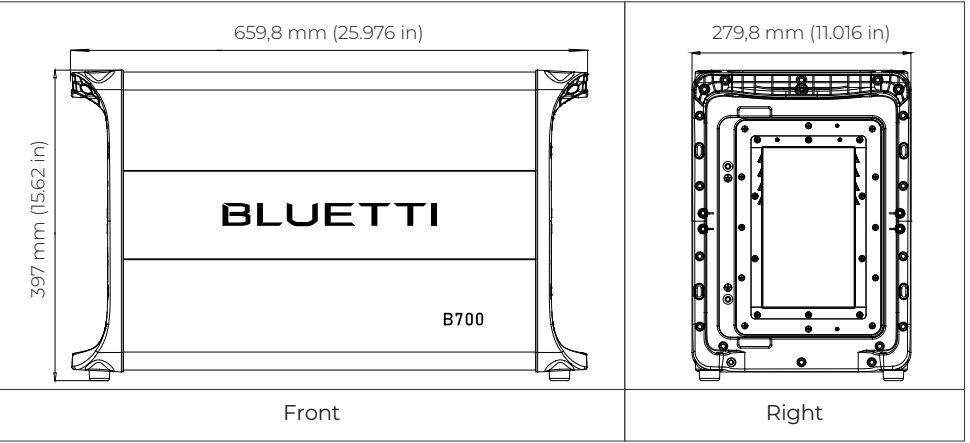Dimensions




Interfaces

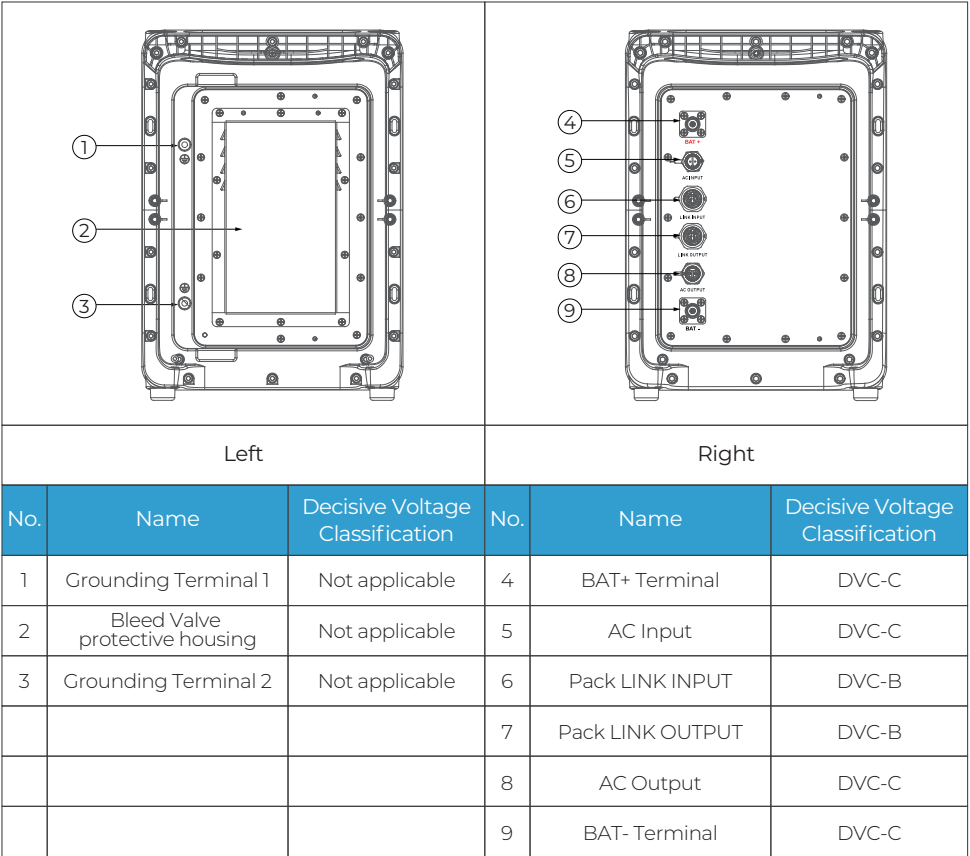


2.4 Electrical Connection

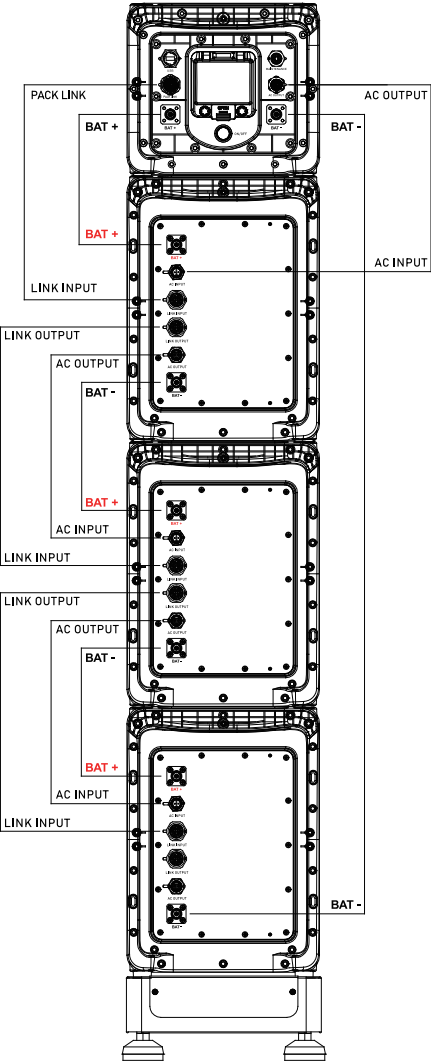The electrical connections are similar across the B5000-2S to B5000-7S systems. Here's the diagram using the B5000-2S system as an example:

	Interface	Description
	HV800 Battery Signal Port (PACK LINK)	For communication between the HV800 and battery packs. Connect to the LINK INPUT port of the top B700.
	HV800 Positive Terminal (BAT+)	For communication between the HV800 and the battery pack. Connect to the BAT+ port of the top B700.
	Battery Positive Terminal (BAT+)	For communication between modules. Connect to the BAT- port of the upper battery when multiple B700s are stacked (except for the top B700).
	Battery Signal Input Port (LINK INPUT)	For communication between modules. Connect to the LINK OUTPUT port of the upper battery when multiple B700s are stacked (except for the top B700).
	Battery Signal Output Port (LINK OUTPUT)	For communication between battery packs. Connect to the LINK INPUT port of the lower battery when multiple B700s are stacked (except for the bottom B700).
	AC Input Port (AC INPUT)	For communication between modules. Connect to the AC OUTPUT port of the upper module.
	AC Output Port (AC OUTPUT)	For communication between modules. Connect to the AC INPUT port of the lower battery when multiple B700s are stacked (except for the bottom B700).
	HV800 Negative Terminal (BAT-)	Connect to the BAT- port of the bottom B700. For B5000-4S to B5000-7S, connect to the BAT- port of the bottom B700 in the stack without HV800.
	Battery Negative Terminal (BAT-)	For communication between modules. Connect to the BAT+ port of the lower battery when multiple B700s are stacked, except for the bottom B700, which connects to the BAT- port of the HV800.

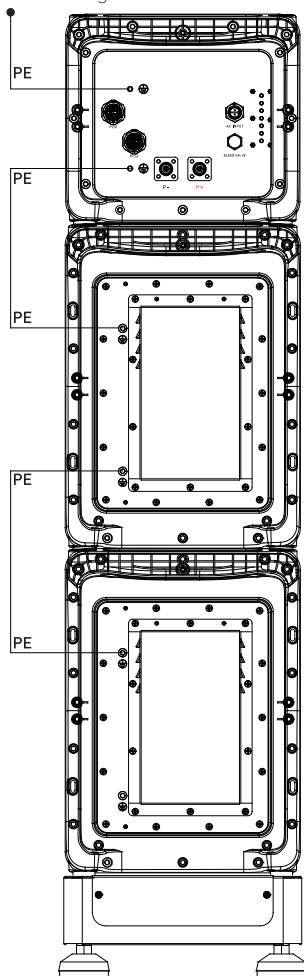Connect to the inverter PE of EP2000 , then to the ground PE.



Interface	Description
HV800 Signal Output Port (PCS1)	For communication between the HV800 and the inverter. Connect to the COM1 port of the inverter.
HV800 Output Negative (P-)	For communication between the HV800 and the inverter. Connect to the BAT- port of the inverter.
HV800 Output Positive (P+)	For communication between the HV800 and the inverter. Connect to the BAT+ port of the inverter.

2.4.1 AC OUTPUT and AC INPUT ports instruction

1. Function:

It is used to balance the capacity of the series battery pack and maintain the consistency of the capacity of the series battery pack.

2. Rating:

Model	B5000-2S	B5000-3S	B5000-4S	B5000-5S	B5000-6S	B5000-7S
Voltage	230Vac	230Vac	230Vac	230Vac	230Vac	230Vac
Current	0.5A	0.75A	1.0A	1.25A	1.5A	1.75A
Frequency	50Hz	50Hz	50Hz	50Hz	50Hz	50Hz

WARNING: The installer can disconnect the AC power cord after the AC power is turned off.






3. System Installation

Check all accessories before installation. Refer to Chapters 3.1, 3.2, and 3.3 for details.




B5000 Combo	Number of HV800 Accessory Sets	Number of B700 Accessory Sets	Number of Accessory Sets*
B5000-2S	1	2	1
B5000-3S	1	3	1
B5000-4S	1	4	1
B5000-5S	1	5	1
B5000-6S	1	6	1
B5000-7S	1	7	1

* Refer to Chapter 3.3 for the specific accessory list for each system.

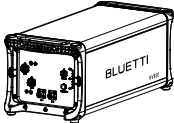3.1 HV800 Packing List

No.	Picture	Description	Qty.
1		HV800 battery controller	1
2		Left cover	1
3		Right cover	1
4		Bracket #1	2
5		Bracket #2	2
6		M4*10 screw (for covers)	2
7		M5*12 screw (for bracket #1)	4
8		M8*60 expansion bolt (for bracket #2)	2
9		M5 hexagon flange nut (for brackets)	2
10		M6*14 screw (for grounding cable)	2
11		Spare screw kit	1

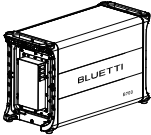3.2 B700 Packing List





No.	Picture	Description	Qty.
1		B700 battery pack	1
2		Bracket #1	2
3		Bracket #2	2
4		M5 hex nut	2
5		Left cover	1
6		Right cover	1
7		M4*10 screw	2
8		M5*12 screw	4
9		M8*60 expansion bolt (for wall mounting)	2
10		M6*14 screw (for grounding cable)	2
11		Spare screw kit	1

3.3 B5000 BESS Packing List

3.3.1 B5000-2S





No.	Picture	Description	Qty.
1	A black power cable with orange connectors at both ends. The cable has a label in the middle that reads "BATTERY CABLE" and "BATTERY CABLE".	Power cable (for battery connection)	1
2	A black communication cable with RJ45 connectors at both ends. The cable has a label in the middle that reads "COMMUNICATION CABLE" and "COMMUNICATION CABLE".	Communication cable	2
3	A black AC power cable with a three-pronged plug at one end and a connector at the other. The cable has a label in the middle that reads "AC POWER CABLE" and "AC POWER CABLE".	AC power cable	2
4	A green grounding cable with circular terminals at both ends. The cable has a label in the middle that reads "GROUNDING CABLE" and "GROUNDING CABLE".	Grounding cable	2
5	A black power cable with connectors at both ends. The cable has a label in the middle that reads "POWER CABLE (NEGATIVE)" and "POWER CABLE (NEGATIVE)".	Power cable (negative, B700 to HV800)	1
6	A red power cable with connectors at both ends. The cable has a label in the middle that reads "POWER CABLE (POSITIVE)" and "POWER CABLE (POSITIVE)".	Power cable (positive, B700 to HV800)	1
7	A rectangular metal base with four mounting holes at the corners.	Base	1
8	A metal leveling foot with a circular base and a threaded rod.	Leveling foot	4

3.3.2 B5000-3S

No.	Picture	Description	Qty.
1		Power cable (for battery connection)	2
2		Communication cable	3
3		AC power cable	3
4		Grounding cable	3
5		Power cable (negative, B700 to HV800)	1
6		Power cable (positive, B700 to HV800)	1
7		Base	1
8		Leveling foot	4


3.3.3 B5000-4S

No.	Picture	Description	Qty.
1		Power cable (for battery connection)	2
2		Communication cable	3
3		AC power cable	3


No.	Picture	Description	Qty.
4		Grounding cable	3
5		Power cable (for connecting 2 battery stacks)	1
6		Power cable (negative, B700 to HV800)	1
7		Communication cable (for connecting 2 battery stacks)	1
8		AC power cable (for connecting 2 battery stacks)	1
9		Grounding cable (for connecting 2 battery stacks)	1
10		Power cable (positive, B700 to HV800)	1
11		Base	2
12		Cable trough	1
13		Leveling foot	8
14		M4*10 screw (for attaching the base to the cable trough)	4
15		Handle seal strip	2




3.3.4 B5000-5S

No.	Picture	Description	Qty.
1	A black power cable with an orange connector on one end and a black connector on the other. The cable has a break in the middle indicated by two wavy lines.	Power cable (for battery connection)	3
2	A black communication cable with two right-angle connectors. The cable has a label in the middle that reads "BATTERY MAX CABLE LENGTH 1000mm (32.8ft)".	Communication cable	4
3	A black AC power cable with two right-angle connectors. The cable has a label in the middle that reads "BATTERY MAX CABLE LENGTH 1000mm (32.8ft)".	AC power cable	4
4	A green grounding cable with two circular terminals at each end. The terminals are labeled "PE".	Grounding cable	4
5	A black power cable with an orange connector on one end and a black connector on the other. The cable has a break in the middle indicated by two wavy lines.	Power cable (for connecting 2 battery stacks)	1
6	A black power cable with two black connectors. The cable has a label in the middle that reads "BATTERY MAX CABLE LENGTH 1000mm (32.8ft)".	Power cable (negative, B700 to HV800)	1
7	A black communication cable with two right-angle connectors. The cable has a break in the middle indicated by two wavy lines.	Communication cable (for connecting 2 battery stacks)	1
8	A black AC power cable with two right-angle connectors. The cable has a break in the middle indicated by two wavy lines.	AC power cable (for connecting 2 battery stacks)	1
9	A green grounding cable with two circular terminals at each end. The terminals are labeled "PE".	Grounding cable (for connecting 2 battery stacks)	1
10	A red power cable with two orange connectors. The cable has a label in the middle that reads "BATTERY MAX CABLE LENGTH 1000mm (32.8ft)".	Power cable (positive, B700 to HV800)	1
11	A white rectangular base plate with four mounting holes at the corners.	Base	2
12	A white rectangular cable trough with a hinged lid.	Cable trough	1



No.	Picture	Description	Qty.
13		Leveling foot	8
14		M4*10 screw (for attaching the base to the cable trough)	4
15		Handle seal strip	2




3.3.5 B5000-6S

No.	Picture	Description	Qty.
1		Power cable (for battery connection)	4
2		Communication cable	5
3		AC power cable	5
4		Grounding cable	5
5		Power cable (for connecting 2 battery stacks)	1
6		Power cable (negative, B700 to HV800)	1
7		Communication cable (for connecting 2 battery stacks)	1
8		AC power cable (for connecting 2 battery stacks)	1







No.	Picture	Description	Qty.
9		Grounding cable (for connecting 2 battery stacks)	1
10		Power cable (positive, B700 to HV800)	1
11		Base	2
12		Cable trough	1
13		Leveling foot	8
14		Communication cable (for connecting 2 battery stacks)	4
15		Handle seal strip	2




3.3.6 B5000-7S

No.	Picture	Description	Qty.
1		Power cable (for battery connection)	5
2		Communication cable	6
3		AC power cable	6

No.	Picture	Description	Qty.
4		Grounding cable	6
5		Power cable (for connecting 2 battery stacks)	1
6		Power cable (negative, B700 to HV800)	1
7		Communication cable (for connecting 2 battery stacks)	1
8		AC power cable (for connecting 2 battery stacks)	1
9		Grounding cable (for connecting 2 battery stacks)	1
10		Power cable (positive, B700 to HV800)	1
11		Base	2
12		Cable trough	1
13		Leveling foot	8
14		M4*10 screw (for attaching the base to the cable trough)	4
15		Handle seal strip	2

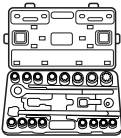3.4 Prepare the Necessary Tools

No.	Picture	Description
1		Electric drill (5 mm/0.2 in, 8 mm/0.31 in, 10 mm/0.39 in)
2		Socket wrench set
3		Wrench
4		Flat screwdriver
5		Cross screwdriver (4 mm/0.157 in)
6		Cable cutter
7		Cable stripper
8		Multimeter (DC voltage ≥ 1.000 VDC)
9		Marker
10		Measuring tape

No.	Picture	Description
11		Level ruler
12		Cable tie
13		Anti-static gloves
14		Protective goggle
15		Mask
16		Safety-toe shoes
17		Vacuum cleaner

3.5 Installation Requirements

3.5.1 Environment Requirements

- Install the B5000 BESS in a well-ventilated and spacious area to ensure good heat dissipation.
- It is recommended that the B5000 BESS be installed indoors.
- Do not install the B5000 BESS in locations with direct sunlight.
- Keep the B5000 BESS away from flammable liquids, gases, or explosive materials.
- Keep away from children and pets.
- Do not install the B5000 BESS outdoors in salt-affected areas, as the accumulation of salt may corrode the system. Salt-affected areas are those within 500 m (1,640.4 ft) from the coast or susceptible to sea breezes. Salt accumulation is influenced by seawater, sea breeze, precipitation, air humidity, topography, and forest cover of adjacent sea areas.

- Do not install the system in low-lying areas where water tends to accumulate. Otherwise, water may leak into the equipment and result in system failure.
- Ambient temperature range: -20°C to 40°C/-4°F to 104°F.
- Relative humidity: 5%-95% (non-condensing).
- Maximum height: 2.000 m/6,561.68 ft.

3.5.2 Clearance from Heat Sources Requirements

When installing the B5000Battery Energy Storage System, maintain a safe distance from heat sources to ensure safe operation and personal protection.


The horizontal distance from water heaters, air conditioners, or other heat-generating equipment must be at least 600 mm.

If the heat source is directly above the battery system, the vertical distance must be at least 900 mm.

	Attention
	If the battery pack is dropped, violently impacted, or tilted during installation, it may result in internal damage. So do not use such battery packs to avoid safety risks such as battery leakage and electric shock.

3.5.3 Location Requirements

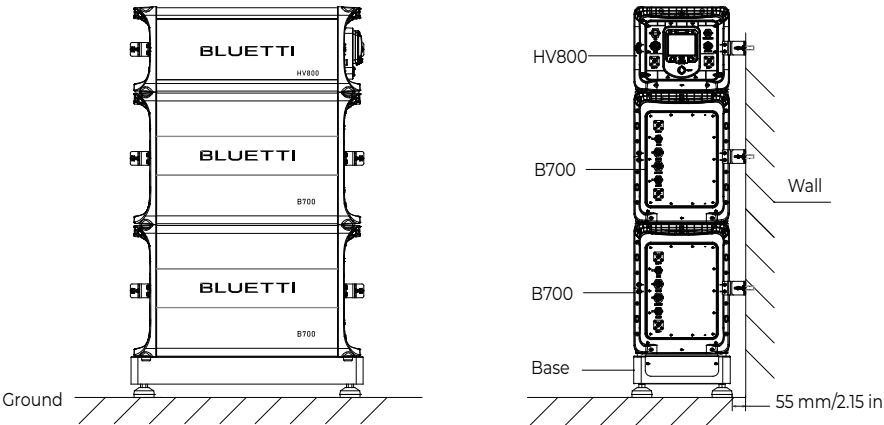- The B5000 BESS should be installed on a firm, flat, level base.
- Secure the system to the wall using brackets on both sides of each layer.
- Do not install the system on flammable materials.
- Consider the weight and placement of components to ensure adequate structural support.
- **The battery has an IP65 rating, but battery storage equipment to not be installed in locations of sunlight does not reach, therefore, ultraviolet rays will have no effect on the labels.**




3.5.4 Space Requirements




Danger

Make sure to check for any cables or pipes before drilling into the wall.

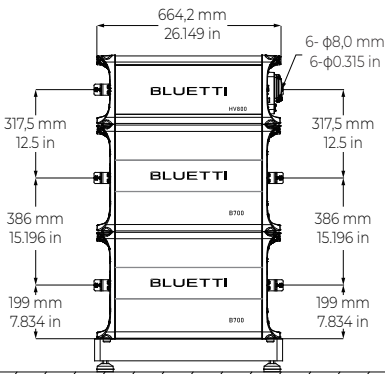
B5000-2S




B5000-3S

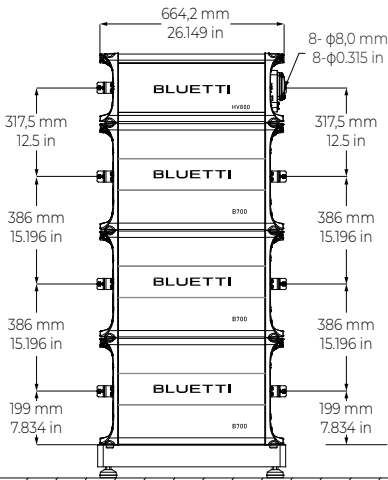


B5000-4S

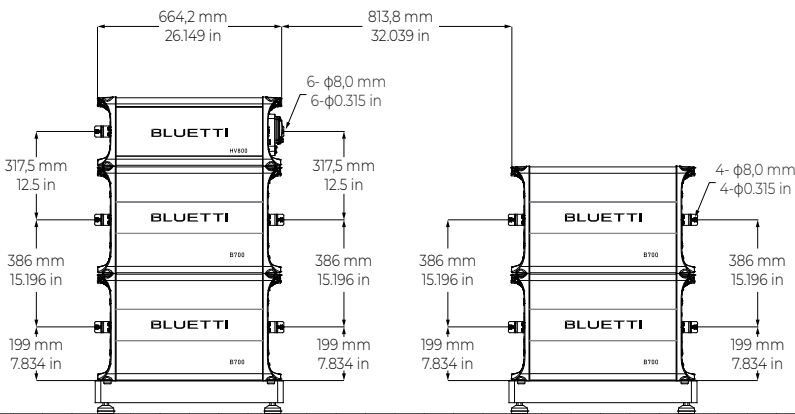


B5000-5S

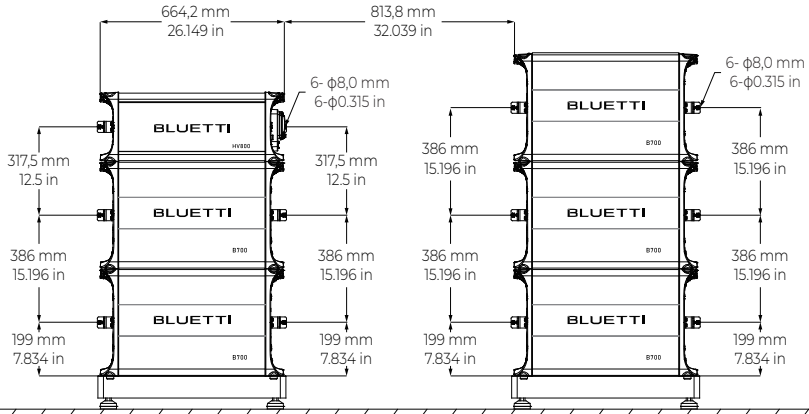

B5000-6S

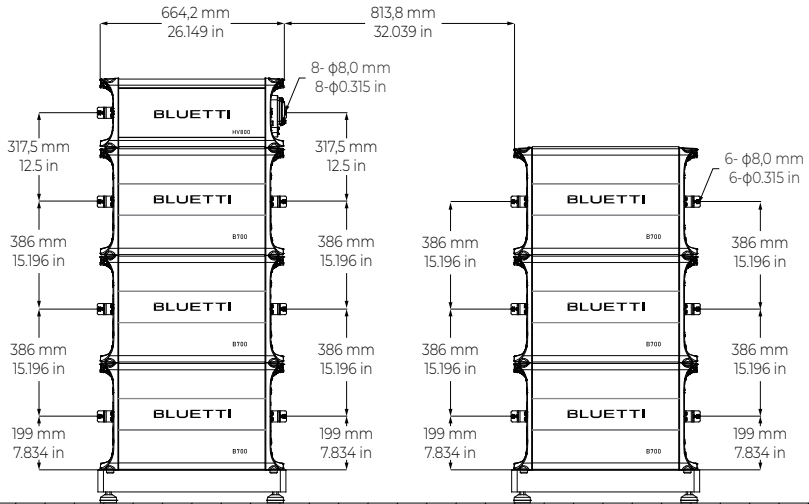


B5000-7S

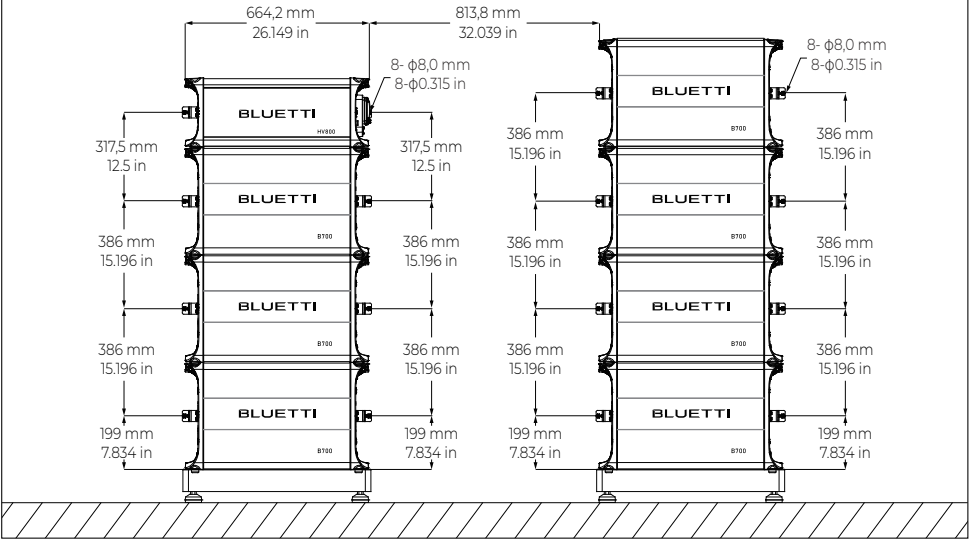

Hole Positions

Note: Stack up to 4 layers of equipment on the base, including the HV800 battery controller. If using more than 3 B700 batteries, arrange them into two separate stacks with at least an 800 mm (31.5 in) gap. Adjust one set of installation holes for each addition or removal of a battery pack.

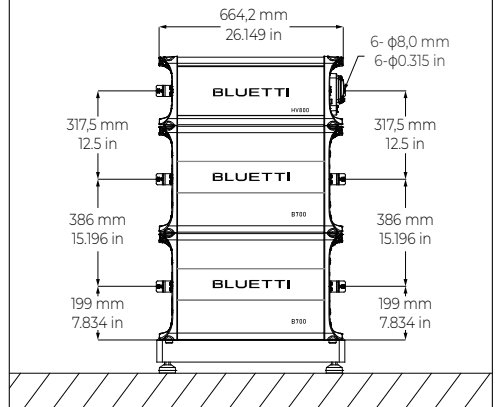B5000-2S




Note: The B5000 BESS installation requires a minimum space, as shown in the space reference below.



- a. in restricted locations, as defined for switchboards in AS/NZS 3000;
- b. within 600 mm of any exit;
- c. within 600 mm of any vertical side of a window or building ventilation that ventilates a habitable room;
- d. within 600 mm of any hot water unit, air conditioning unit or any other appliance;
- e. within 900 mm below any of the items included in b, c and d;
- f. in ceiling spaces;
- g. in wall cavities;
- h. on roofs except where specifically deemed suitable;
- i. under floors of habitable rooms;
- j. under stairways;
- k. under access walkways; or
- l. in an evacuation route or escape route.

In areas of domestic or residential electrical installations, battery systems shall not be located in habitable rooms.

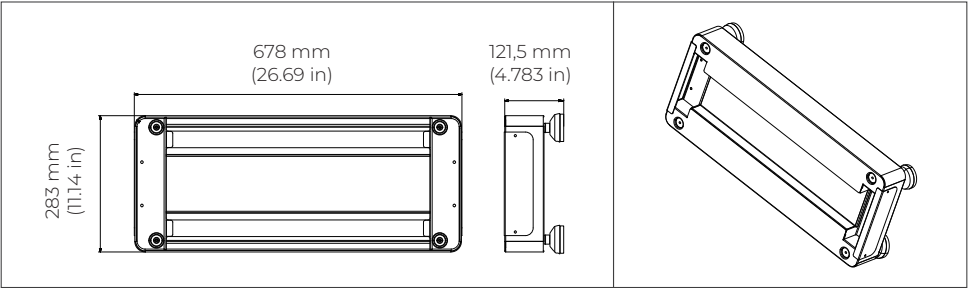3.5.5 Base Dimensions




3.6 Installation

The system installations are similar across the B5000-2S to B5000-7S systems. The manual uses the B5000-2S system as an example.

Note: Arrange battery packs of B5000-4S, B5000-5S, B5000-6S, and B5000-7S systems into two separate stacks.

3.6.1 Stacking

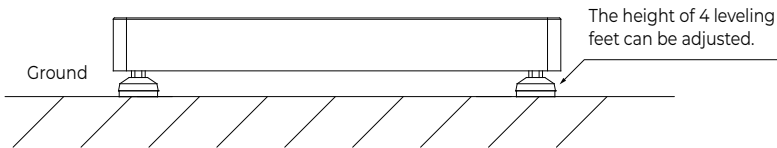Step 1: Place the base on the ground and adjust the height of leveling feet so that the base stands stably on the ground. Don't forget to tighten the nuts to secure the leveling feet.





Step 2: Mark the drilling positions with tape and marker. Drill holes with the electric drill and insert M8 expansion bolts.

Step 3: Move the B700 battery pack to the base. Two people are required to transport the B700. Align the bumps on the battery with the notches on the base to secure the battery in place.

Step 4: Fix 2 brackets #1 to two sides of B700 with 4 M5*12 screws. Put the bracket #2 through the compression rivet screw of bracket #1 and M8 expansion bolts. Secure the connection with M8 and M5 nuts.

Step 5: Repeat Steps 3 and 4 to secure all battery packs.

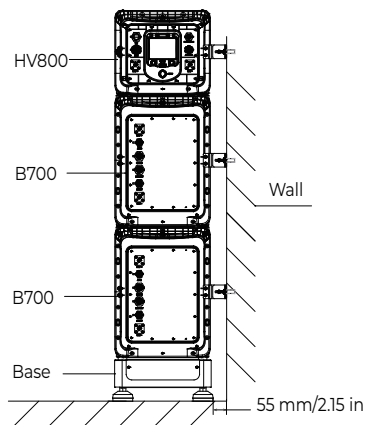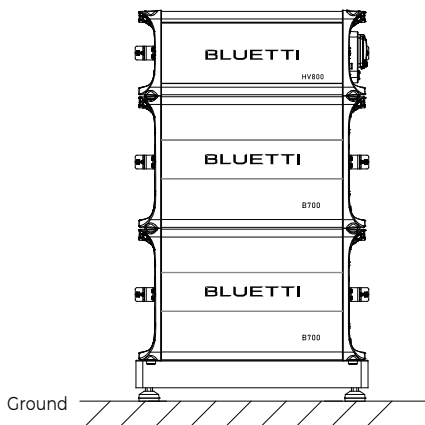Step 6: Follow the same steps to install the HV800 battery controller on top.



3.6.2 Grounding Requirements

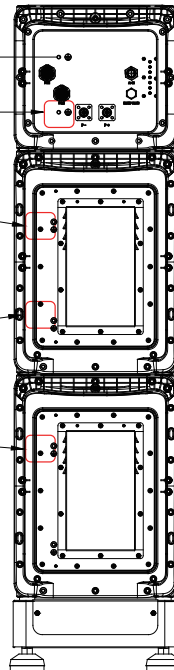
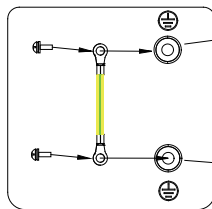
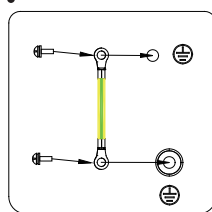
- Always make the ground connection first and disconnect it last when installing or removing the equipment.
- Take care not to damage the grounding conductor.
- Before operating the equipment, always confirm that it is securely and reliably grounded.

Grounding Cable:

Step 1: Prepare a cross screwdriver, M6*14 screws, and the grounding cables.

Step 2: Use the screwdriver to tighten the grounding cable from the lower terminal to the higher terminal in sequence.


Connect to the inverter PE of EP2000, then to the ground PE.




Note: For B5000-4S to B5000-7S, connect the cables within each stack first. Then use the longer grounding cable to connect two battery stacks.

3.6.3 Communication Cable

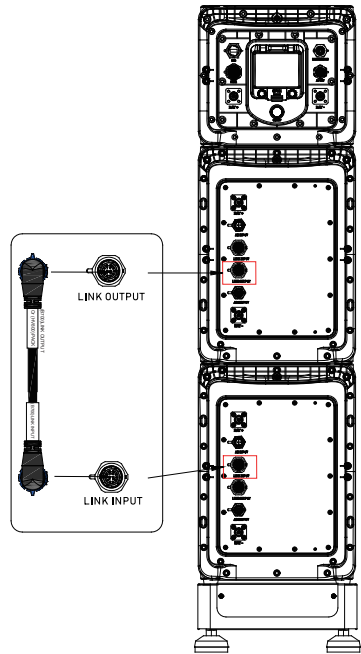Step 1: Connect the communication cables from the lower B700's LINK INPUT port to the upper B700's LINK OUTPUT port. Start with the bottom pack.




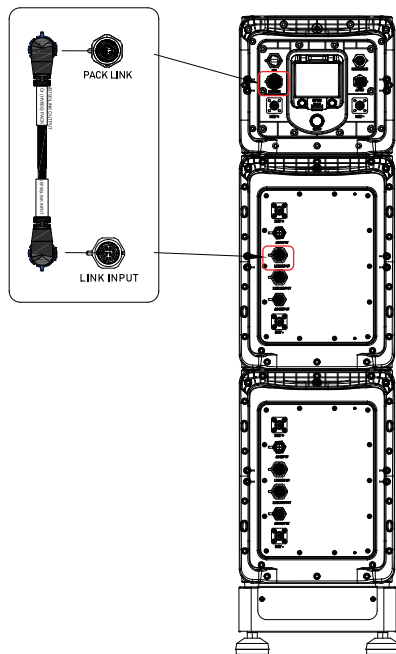Step 2: Connect the top B700's LINK INPUT port to the HV800's PACK LINK port using the communication cable.




3.6.4 AC Power Cable

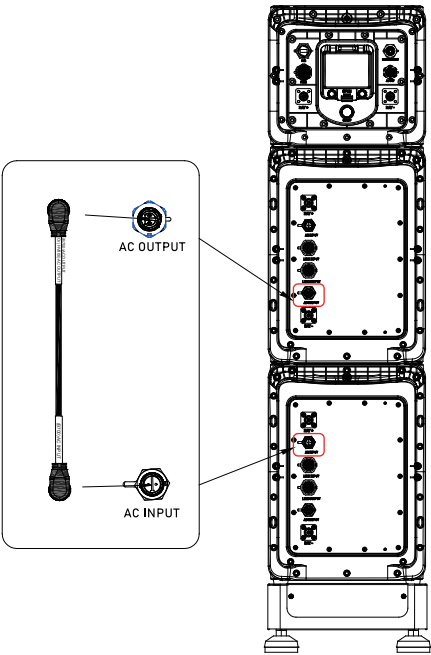Step 1: Connect the AC power cables from the lower B700's AC INPUT port to the upper B700's AC OUTPUT port. Start with the bottom pack.




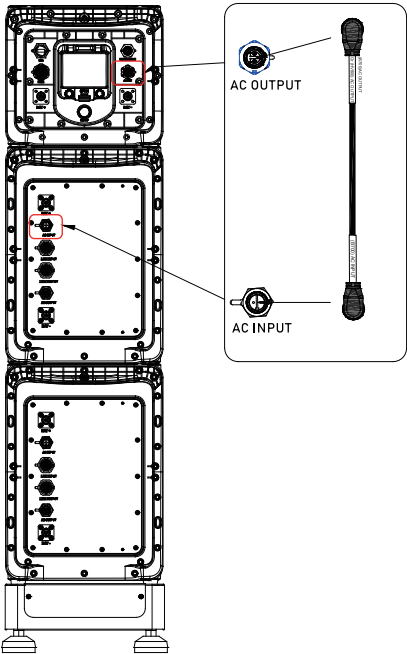Step 2: Connect the top B700's AC INPUT port to the HV800's AC OUTPUT port using the AC power cable.



3.6.5 Negative Power Cable

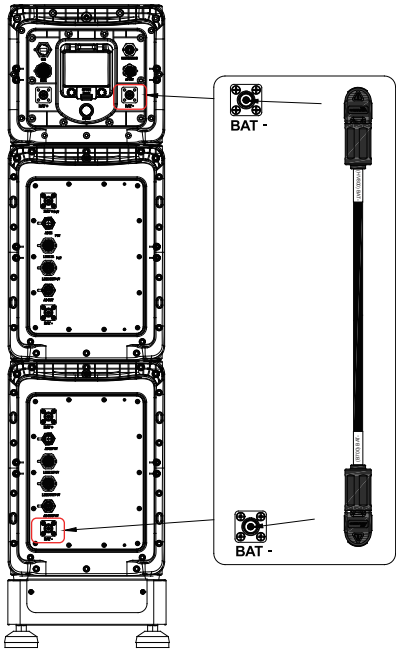
Connect the bottom B700's BAT- port to the HV800's BAT- port using the negative power cable.




3.6.6 Power Cables (with Positive Terminal)

Note: Ensure the mentioned cables are securely connected.

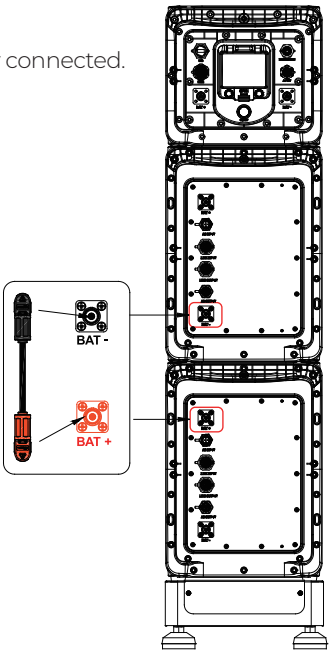Step 1: Use the power cable to connect the lower B700's BAT+ port to the upper B700's BAT- port (red for positive and black for negative). Start with the bottom pack.





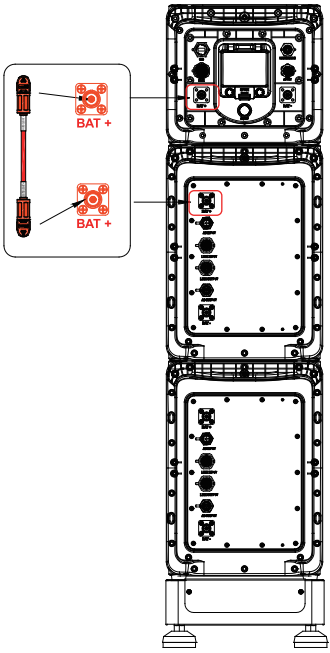Step 2: Connect the top B700's BAT+ port to the HV800's BAT+ port using the positive power cable.



3.6.7 Side covers installed

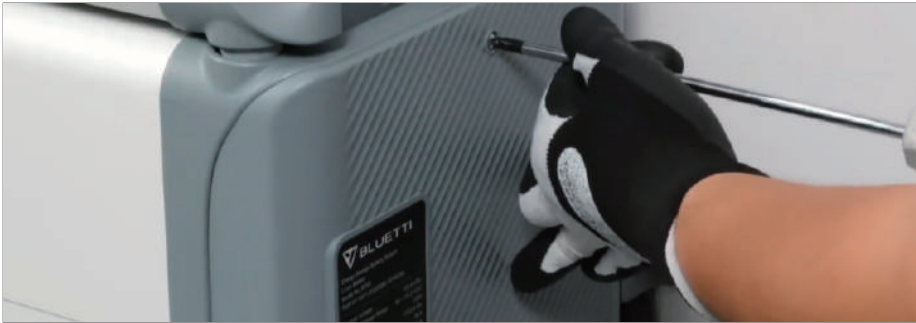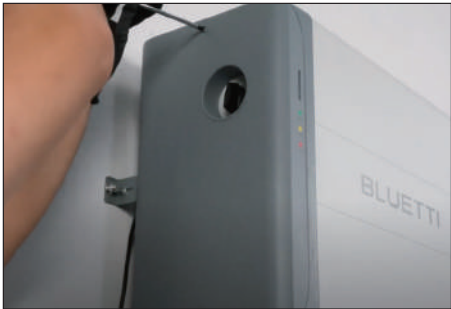Use a screwdriver to align the holes and tighten the screws to secure the cover. Please note that the left and right covers are dedicated parts and cannot be installed interchangeably.



3.6.8 Handle seal strip(s) get installed

The handle seal strip should be installed during the final stage of the installation process.



3.6.9 System Configuration Confirmation

After installation, please confirm the system model according to the actual number of connected B700 battery packs.

Example: Connecting 3 × B700 → corresponding system model: B5000-3S (HV800 × 1 + B700 × 3).

Locate the corresponding model on the nameplate and use a marker to tick ☒ the empty checkbox on the left to complete the marking.

Series Module No./Nominal Voltage/Rated Capacity/Energy/Operating Voltage Range/Designation:

☐

B5000-2S/204.8VDC/72Ah/14.75kWh/160V~230.4V
IFpP/41/150/112/[(32S)2S]M/-30+60/95

☒

B5000-3S/307.2VDC/72Ah/22.12kWh/240V~345.6V
IFpP/41/150/112/[(32S)3S]M/-30+60/95

☐

B5000-4S/409.6VDC/72Ah/29.50kWh/320V~460.8V
IFpP/41/150/112/[(32S)4S]M/-30+60/95

☐

B5000-5S/512VDC/72Ah/36.87kWh/400V~576V
IFpP/41/150/112/[(32S)5S]M/-30+60/95

☐

B5000-6S/614.4VDC/72Ah/44.24kWh/480V~691.2V
IFpP/41/150/112/[(32S)6S]M/-30+60/95

☐

B5000-7S/716.8VDC/72Ah/51.61kWh/560V~784V
IFpP/41/150/112/[(32S)7S]M/-30+60/95

4. System Operation

4.1 Power on/off

Power on:

- Ensure all power cables, communication cables, AC power cables, and other cables are connected securely.
- Confirm that all components of the system are installed according to specific requirements.
- Move tools and components away from the equipment.
- Switch the circuit breaker on the HV800 to “ON”.
- Press and hold the power button on the HV800 until it lights up green, and the high voltage and low voltage indicators are steady.

Power off:

- Press the power button on the HV800 until the green indicator starts flashing, indicating that the B5000 BESS is entering shutdown.
- During the shutdown, pressing the buttons on the B5000 BESS won't have any effect.
- When the HV800's indicator turns off, the B5000 BESS powers off.
- Switch the circuit breaker on the HV800 to “OFF”.

4.2 Status of Indicators

4.2.1 Power Button

Status	Description	Note
Off	B5000 BESS shutdown	HV800 circuit breaker can be operated.
Steady	B5000 BESS operating	HV800 circuit breaker cannot be operated.
Flashes once every 2s	Self-check before powering on	
Flashes once every 0.5s	Powering off	

4.2.2 LV ON Indicator

Status	Description	Note
Off	B5000's low-voltage system not activated	/
Steady	B5000's low-voltage system operating normally	HV800 circuit breaker cannot be operated.
Flashes once every second and then turns off	B5000's low-voltage system powering off	

4.2.3 HV ON Indicator

Status	Description	Note
Off	B5000's high-voltage system not activated	/
Steady	B5000's high-voltage system operating normally	HV800 circuit breaker cannot be operated.
Flashes once every second	B5000's high-voltage system has a charging/discharging fault	

4.2.4 SoC Indicators

- Each lit indicator represents 20% SoC.
- All indicators remain steady when fully charged and go off when fully discharged.
- Flashing indicators show the charging progress.

4.3 System Maintenance

- If the HV ON indicator flashes, please contact BLUETTI support or your local BLUETTI dealers.
- To avoid abnormal operation, do not disconnect the HV800 circuit breaker while the B5000 is in normal operation.
- Do not disassemble the metal enclosure of the B5000 system to prevent electric shock or explosion hazards.

5. Disposal



Attention

BLUETTI does not recycle batteries. Please contact your local recycling facilities for proper battery disposal.
If local options are unavailable, consider reaching out to nearby international recycling organizations.

Disposal Process Overview:

1. Contact the nearest battery recycling organization.
 2. The organization assesses the costs of recycling.
 3. Recycling methods include:
 - On-site recycling: The organization collects lithium batteries on-site; costs vary based on distance and transportation.
 - Centralized recycling: Gather all lithium batteries at one location for the organization to manage.
- Note:** You are responsible for transportation expenses.
4. Recycled lithium batteries are handled by the organization.

6. Specifications

6.1 B700 Battery

Item	Rating	Note
Battery Chemistry	LiFePO ₄	Prismatic cell
Cell Capacity	72 Ah	
Battery Capacity	72 Ah	1P32S
Nominal Battery Voltage	102,4 V	3,2 V × 32
Nominal Battery Energy	7.372,8 Wh	Charging: 0.5C/3,6 V/0.05C (25°C/77°F) Discharging: 0.5C/2,5 V (25°C/77°F)
Usable Battery Energy	6.635,52 Wh	90% DoD Charging: 0.5C (25°C/77°F) Discharging: 0.5C (25°C/77°F)
Cell Overvoltage Protection	3,62 V	
Cell Undervoltage Protection	2,5 V	
Minimum Output Voltage	83,2 V	2,6 V × 32
Maximum Input Current	36 A	The continuous input current is affected by temperature and SoC.
Maximum Output Current	50 A	The continuous output current is affected by temperature and SoC.
Short-Circuit Protection	Yes	
Discharging Overtemperature Protection	61°C/141.8°F	
Discharging Overtemperature Recovery	55°C/131°F	
Discharging Low Temperature Protection	-22°C/-7.6°F	
Discharging Low Temperature Recovery	-20°C/-4°F	
Charging Overtemperature Protection	61°C/141.8°F	
Charging Overtemperature Recovery	55°C/131°F	
Charging Low Temperature Protection	-1°C/30.2°F	
Charging Low Temperature Recovery	1°C/33.8°F	

6.2 HV800 Battery Controller

Item	Rating	Note
Working Voltage	130 Vdc to 800 Vdc	
Output Switch	High-voltage contactor × 2	
Output Switch Position	1 each for positive and negative terminals	
Fuse	800 Vdc/150 A, fast blow	
Circuit Breaker	1.000 Vdc/80 A, Type B	
Output Connector	100 A/1.000 Vdc, aviation connector	
Dimensions (W × H × D)	659,8 mm × 279,8 mm × 248,8 mm /25.98 in × 11.02 in × 9.8 in	
Net Weight	19 kg/41.89 lbs	

6.3 B5000 BESS

Item		Rating	Note
Noise Emission (Typical)		<25 dB	No fans
Number of B700 Connected in Series		2 to 7 units	Parallel connection not supported
Operation Temperature Range	Charging	0°C to 55°C/32°F to 131°F	
	Charging	-20°C to 55°C/-4°F to 131°F	The PCS connects to the grid.
	Discharging	-20°C to 55°C/-4°F to 131°F	
Storage Temperature		Up to 1 month: -20°C to 40°C/-4°F to 104°F Up to 3 months: -20°C to 30°C/-4°F to 86°F	At least one charge cycle every 3 months at 28% to 30% SoC.
Working Humidity		5% to 95%, relative humidity	
Operating Altitude		≤2,000 m/6,561.68 ft	
Degree of Protection		IP65	
Mounting		Floor Mounting (fixed to the wall)	Stack up to 4 modules on the ground per stack.
Dimensions (W × H × D)		Depends on the installation	
Net Weight		Depends on the number of modules	
Certificates and Permits		IEC62619, UN38.3, VDE2510-50	

6.4 B5000 BESS Configuration

B5000 Combo	Number of HV800	Number of B700	Working Voltage (V)	Battery Capacity (kWh)
B5000-2S	1	2	160 to 230,4	14,7
B5000-3S	1	3	240 to 345,6	22,1
B5000-4S	1	4	320 to 460,8	29,4
B5000-5S	1	5	400 to 576	36,8
B5000-6S	1	6	480 to 691,2	44,2
B5000-7S	1	7	560 to 784	51,6



IMPORTER: BLUETTI ENERGY PTY LTD

Address: Unit 15, 25 Gibbes Street Chatswood NSW 2067

SHENZHEN POWEROAK NEWENER CO., LTD

Email: sale-au@bluettipower.com

Address: F19, BLD No.1, Kaidaer, Tongsha Rd No.168, Xili Street, Nanshan District,
Shenzhen, China

Telephone: +86 752 5192091

Telephone: 0488801566



Always Share Excellence

P/N: 17.0303XXXX-00A0